Hot Mix Asphalt (HMA) Facilities

Overview

- Introduction
- Emissions and Effects
- Process
- Control
- Permit Requirements
- Inspection Procedures

Introduction

Industry Background

- Over 125 Hot Mix Asphalt (HMA) facilities in CA
  - ✓ Stationary
  - ✓ Some transportable
- HMA is combination of
  - ✓ Hot aggregate,
  - ✓ Hot liquid asphalt binder
  - ✓ Filler
- Recycled Hot Mix (RHM) is HMA with
  - ✓ Crumb rubber (rubberized asphalt concrete)
  - ✓ Reclaimed asphalt

Introduction

Industry Background

- Two basic processes
  - ✓Batch
  - ✓Continuous mix
- Batch change recipe based on customers order
- Continuous mix one recipe at a time stored for up to 7 days in insulated silo

Introduction

Permit Process Requirements

- District issues an
- "Authority to Construct"
- Inspection conducted
  - ✓Usually includes a source test
- All conditions met "Permit to Operate" is issued

Emissions and Effects

- HMA facilities emit pollutants such as PM, CO, NOx, SOx, VOCs and other toxic substances
- NOx and VOCs are Ozone (O_3) precursors each reacts with sunlight to form O_3

Emissions/Effects

Typical HMA Pollutants	Emissions (tons/yr)
PM (total for all size categories)	1500
PM10	700
PM2.5	400
CO	800
NOx	450
Total Organic Compounds	200
Reactive Organic Gas	200
SOx	100
VOCs	200

Emissions/Effects

AB 2588 Emission Inventory

- Requires HMA facilities to submit an emission inventory
- HMA emit 78 of the 730 listed "Toxic Substances"
- Emission Estimates
  - ✓US EPA, AP-42;
  - ✓District; or
  - ✓Source Test

Emissions/Effects

Criteria and Precursor Pollutants

- Created during production, storage, and transport of HMA
- PM from aggregate

Emissions/Effects

Criteria and Precursor Pollutants (cont.)

- PM, CO, NOx, VOCs, and SOx from fuel combustion and storage of asphalt binder and HMA
- Blue Smoke (VOCs) from production and loading

Process/Control

Hot Mix Facilities are Regulated Under Subpart OOO

- ✓How much aggregate is processed
- ✓Moisture content of the processed material
- ✓Control efficiency of the air pollution control equipment
- ✓Opacity

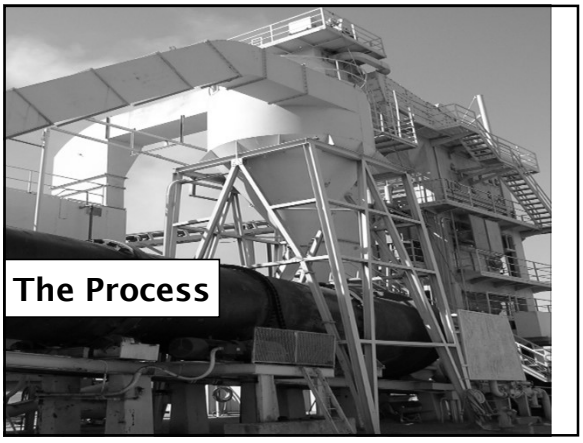

Process

Composition of HMA

- Binder
- Filler
- Aggregate

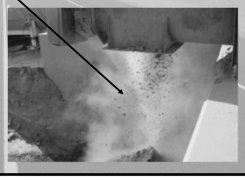

Process
Binder Composition

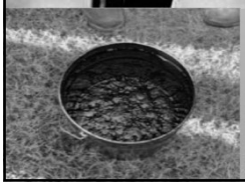

Binder Terms

- Asphalt Binder
  - ✓ Includes asphalt cement and any material added to modify properties
- Bitumen
  - ✓ Class of dark colored (solid, semi solid, or viscous)

Process
Binder Composition

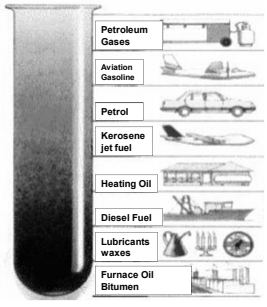

Crude Petroleum Distillation Fractions

Process
Asphalt Grading

- Two grading methods
  - ✓Viscosity Grading of Binder
  - ✓Superpave Performance Grade (PG)

Process

Viscosity Grading of Binder

- Viscosity test developed during the early part of the 20th century.
  - ✓AC
    - Tests viscosity of binder to characterize viscosity as supplied (simulating condition before used)
  - ✓AR
    - Tests viscosity of binder aged in a rolling thin-film oven (simulating HMA production)

Process

Viscosity Grading of Binder (cond.)

- PG (Superpave Performance Grade)
  - ✓Test developed in 1980-1990
  - ✓Based on performance of binder in relation to climate
  - ✓Temperature range is 115 to 180 F
  - ✓Address rutting, fatigue cracking, and thermal cracking

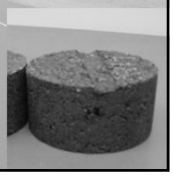

Process

Conventional HMA Binder

- Solid at room temperature
- 250 and 325 F from point of origin to the final destination
- Softening binder adds VOCs by
  1. Adding softer grade asphalt
  2. Adding lighter petroleum oils

Process

Typical Alternative Asphalt Binder

- Reclaimed asphalt pavement (RAP)
- Used tires (crumb rubber)
- Proprietary polymers
- Anti-stripping agents (hydrated lime)
- Recycled baghouse dust

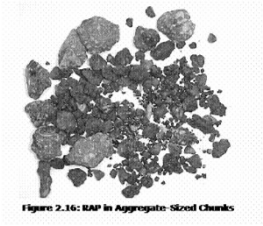

Figure 2.16: RAP in Aggregate-Sized Chunks

Process

Polymer Modified Binders

- proprietary blends added to bitumen
- Formula varies depending on desired result of end product

Process

Filler

- Dust added to asphalt binder and aggregate to improve adhesion

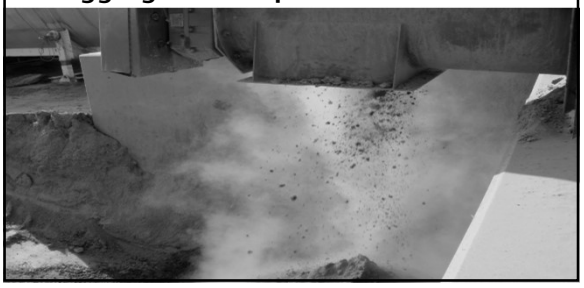

Process

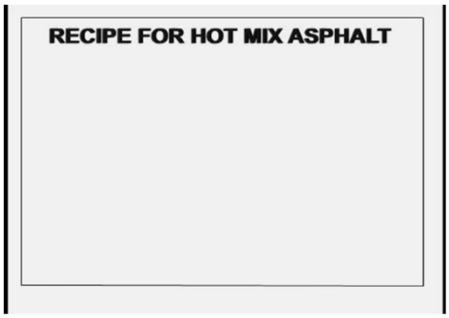

Process

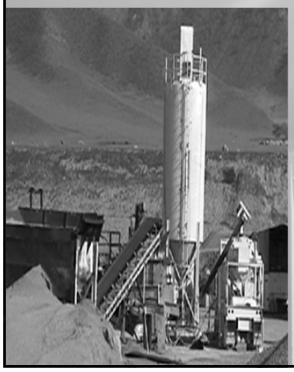

Hydrated Lime

- Caltrans requires a lime-slurry-marination (LSM) where climate promotes stripping
- Requires that mixture be stockpiled for 24 hours before use "marinated"

Process

Hydrated Lime

- Anti-stripping agent:

1. Added dry with binder
2. Added dry to wet or dry aggregate and "marinated" for several days
3. Added as lime slurry for immediate use or "marinated"

Process

Anit-stripping Agents

Illustration of binder with anti-stripping agent and without anti-stripping

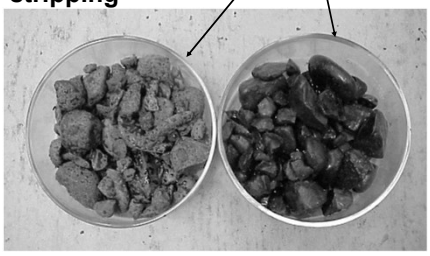

Process

Alternative Binders

- Kept at temperatures higher than conventional binder
- Two types

1. Polymer-modified asphalt cement
2. Crumb rubber modified

Process

Crumb Rubber

- Added to binder to make crumb rubber modified (CRM)
- 75% scrap tire and 25% virgin rubber
- Non-hazardous hydrocarbon polymer
- Rubber-modified asphalt concrete (RAC)

Process

Advantages of Crumb Rubber

- Waste reduction
- Less water
- Quiet
- Lasts Longer
- BUT No regulatory relief from visible emission evaluation (VEE)

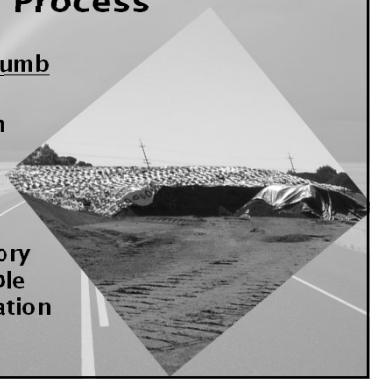

Process

RECIPE FOR RAC

Process
Reclaimed Asphalt Pavement

- RAP is
  - ✓ Top layer of asphalt pavement removed
- Developed because of energy, economic, and environmental concerns
- RAP could be 30% of mix
- Increases asphalt lifetime
- May increase generation of Blue Smoke

Process
RAP

- Production temp of virgin aggregate is 500-800 F
- RAP is heated through conductive heat transfer
- RHM is 350 F

Process

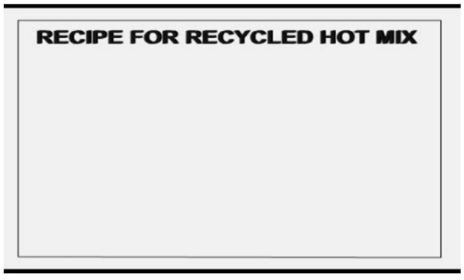

Process
In the News

- Watch for
  - ✓ Warm mix asphalt
- Advantages
  - ✓ Lower Production temp. 220 to 275 F
  - ✓ Less energy
  - ✓ Reduced cracking
- Disadvantages
  - ✓ Further testing to ensure QA/QC
  - ✓ Rutting
  - ✓ Workability
  - ✓ Longer setting=traffic delays

Process
HMA Facility Types

- Batch
- Continuous Mix

Process
Batch Mix

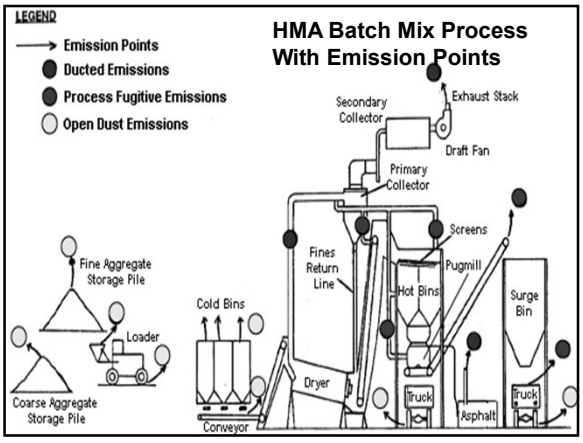

Process
Batch Facility

- Aggregate
  - ✓Stored in cold bins
  - ✓Moved by conveyor
  - ✓Sorted and weighted
  - ✓Dropped into dryer
  - ✓Elevated to top of batch tower and
  - ✓Separated

Process
Cold Bins
Aggregate Stockpiles

Process
Cold Bins and Conveyors

Batch Process
Aggregate Dryer

Batch Process
Rotary Dryer

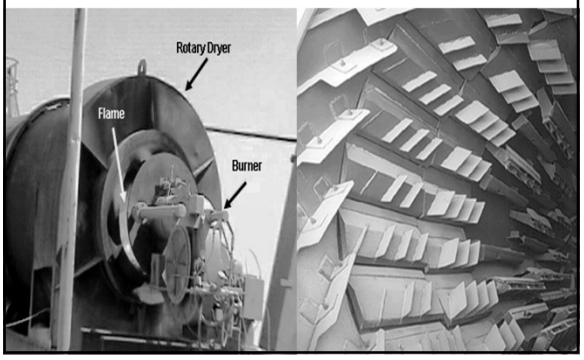

Process
Combustion and Basic Burner Design

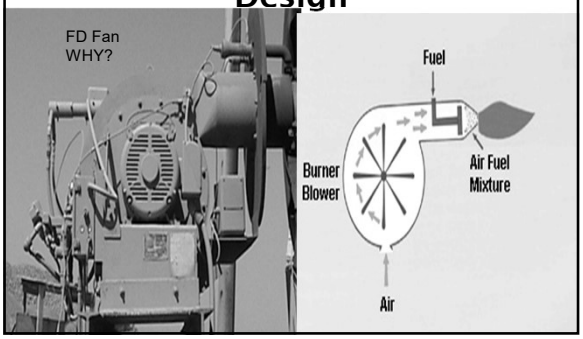

Batch Process
Rotary Dryer Counterflow Design

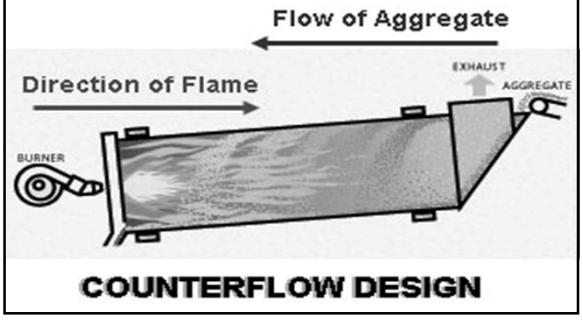

Batch Process
(continued)

- Hot aggregate dropped from elevator to vibrating screens, sorted by size
- Weighed, and dropped into pugmill for mixing with
- Hot liquid asphalt binder and filler until coated
- Dropped into truck for delivery

Process

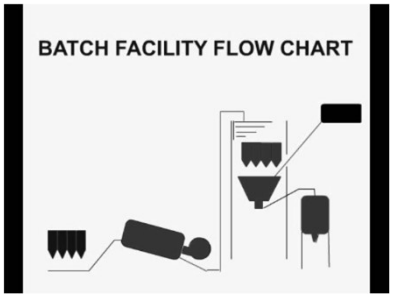

Batch Process
Hot Aggregate Conveyor to Pugmill

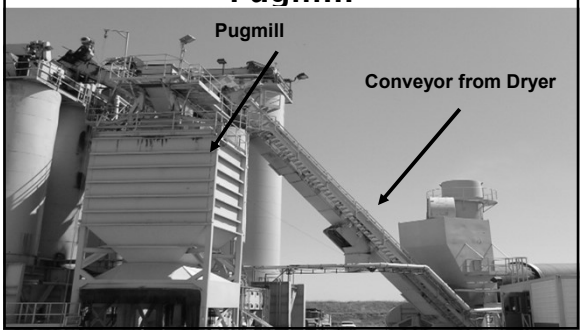

NACT 242 Hot Mix Asphalt Operations

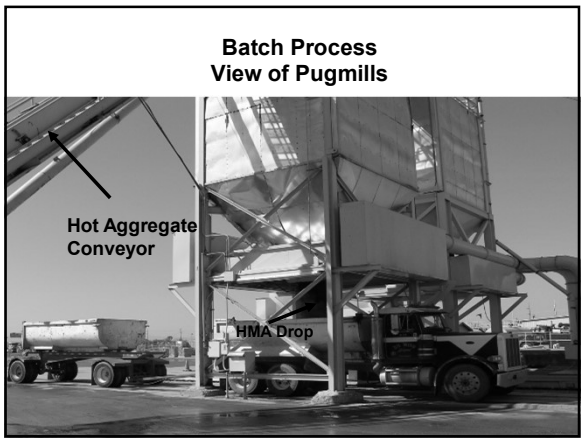

Batch Mix Process without Pugmill

- Newer design
- All ingredients are mixed together in the drum and sent to silos
- Better controls

Batch Process Rotary Dryer/Mixer Combined

View of Batch Operated Double Drum Mixer Down for Maintenance

Inside View of Double Drum Mixer

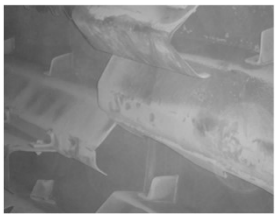

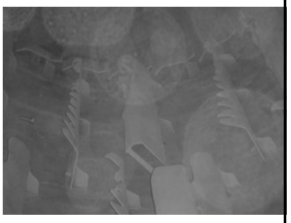

Continuous Mix Process

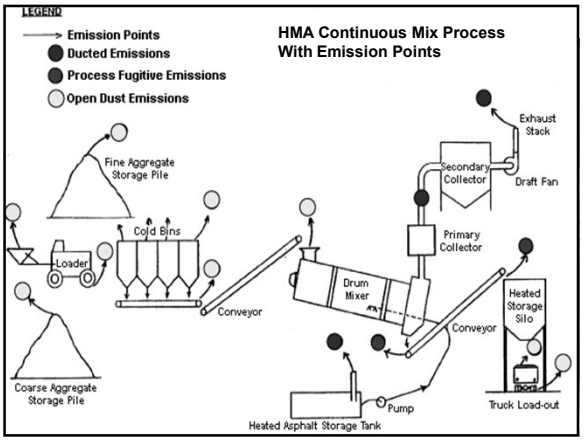

Process
Continuous Mix Facility Characteristics

1. HMA is continuously produced
2. No batch towers to segregate hot aggregate
3. Insulated heated storage silos are used instead of surge bins to store HMA
4. Production is horizontal verses vertical

Process

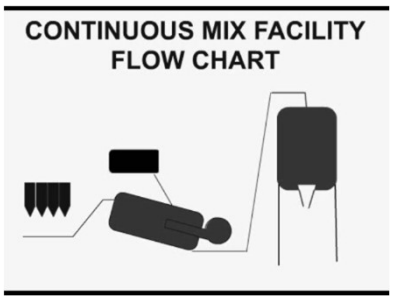

Process
HMA Drum Design

Process
Drum Design

- 4 general designs
  - ✓ Counter Flow Dryer Coater
  - ✓ Parallel Flow Drum Mixer
  - ✓ Double Barrel Drum Mixer
  - ✓ Triple-Drum™ Mixer
- Drum mixers two zones:
  - ✓ primary for aggregate drying and heating
  - ✓ secondary for mixing heated aggregate with binder and filler

Counter Flow Dryer and Coater

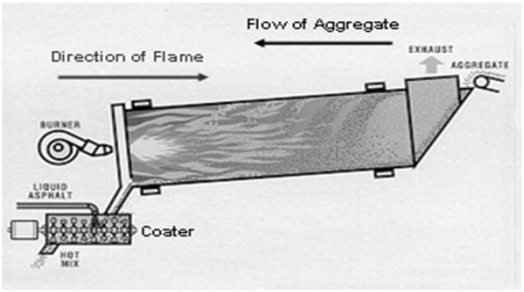

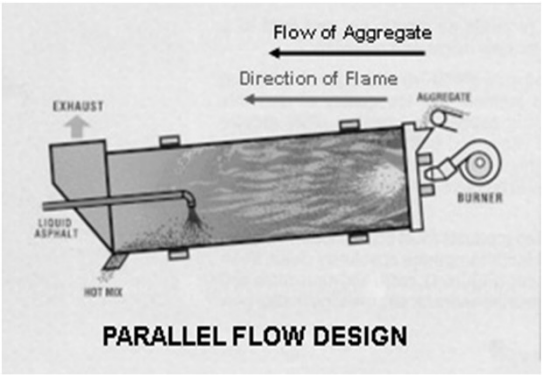

Double Barrel Drum Mixer

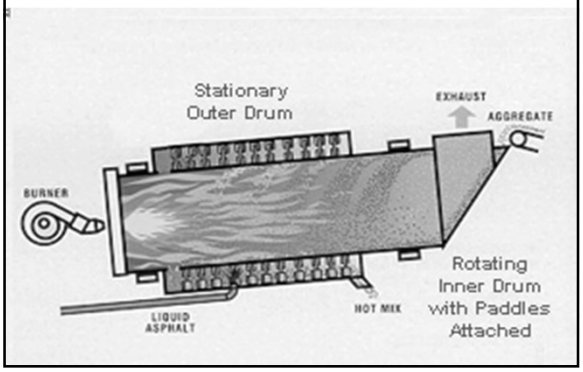

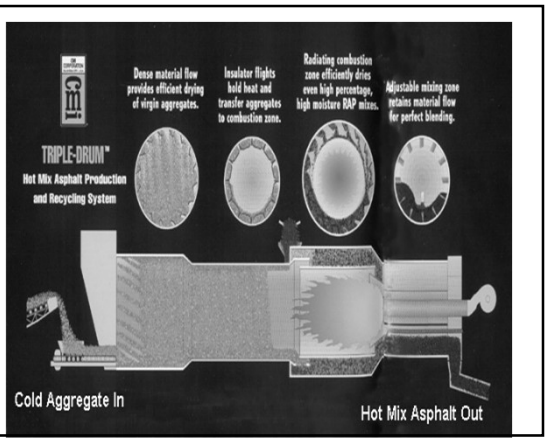
Dense material flow provides efficient drying of virgin aggregates.
Insulator flights hold heat and transfer aggregates to combustion zone.
Radiating combustion zone efficiently dries even high percentage, high moisture RAP mixes.
Adjustable mixing zone retains material flow for perfect blending.
TRIPLE-DRUM™
Hot Mix Asphalt Production and Recycling System
Cold Aggregate In
Hot Mix Asphalt Out

Triple-Drum


Triple-Drum Mixer


WARNING
CHECK WITH
SPHALT PLANT
BEFORE
UNLOADING
Process
Asphalt
Binder
Storage

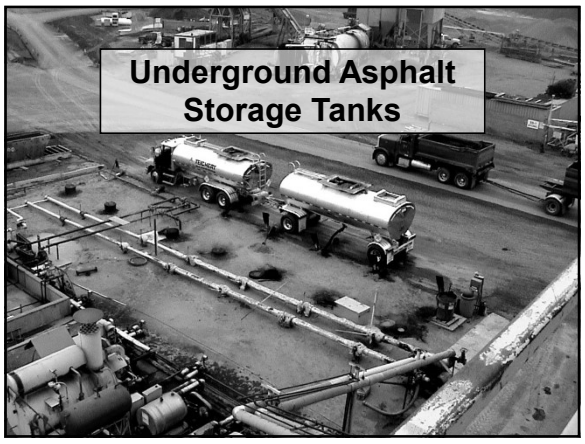

Emission Controls

Control Aggregate

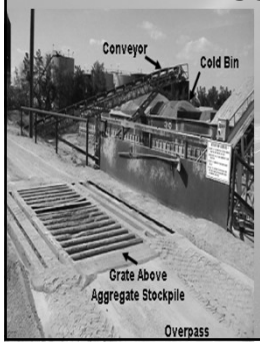

- Wind-blown dust
- Fugitive dust
- Common Control methods

Process Cold Bin Dust Collection System


Dust Suppression?

Emission Control Hot Aggregate Handling

Emission Control Hot Aggregate Handling

Emission Control Flue Gas Recirculation

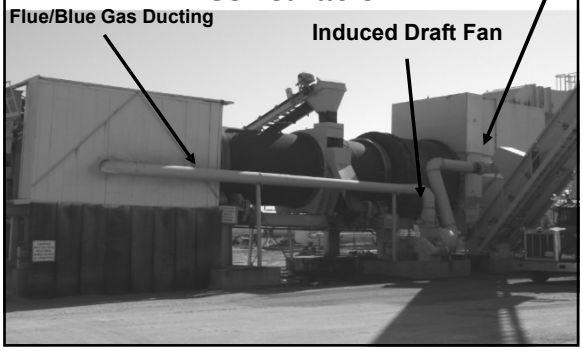

Emission Control

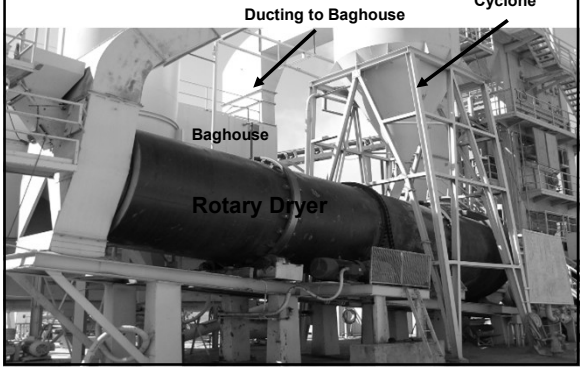

Small Binder Storage Tank

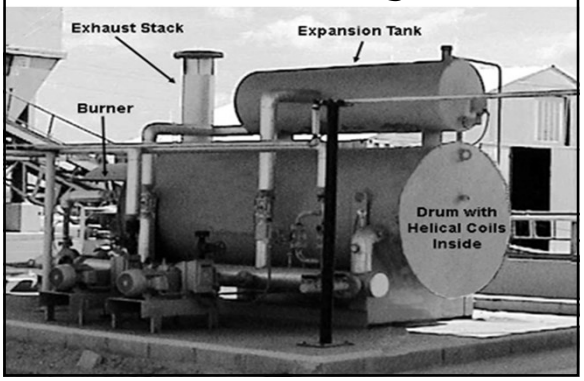

Hot Oil Heater Coils

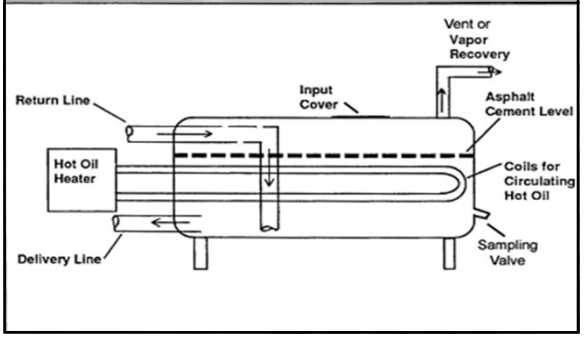

Process Underground Storage Tanks

Uncontrolled RAC Binder Storage Tank

Controlled Binder Storage Tank Vent Condenser

Dust Silo

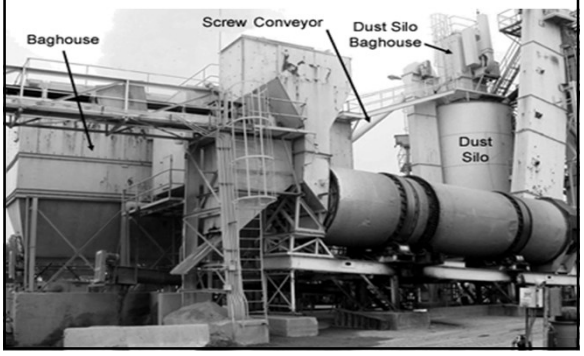

Control Draft Air

Control
Draft Air

- Draft air passes through ducting due to pressure differential
- Draft air affects

1. Combustion efficiency
2. How a system develops leaks
3. Control effectiveness

Control
Types of Draft Air

- 4 Type

1. Forced Draft Air
   - ✓ Air that is pushed resulting in positive pressure
2. Induced Draft
   - ✓ Air is pulled by a fan resulting in negative pressure

Control
Draft Air Cont.

3. Natural Draft Air
   - ✓ Difference in temp between flue gases and the ambient air.
4. Balanced Draft
   - ✓ Forced draft fan pushes combustion air into combustion chamber.


Control
FORCED DRAFT

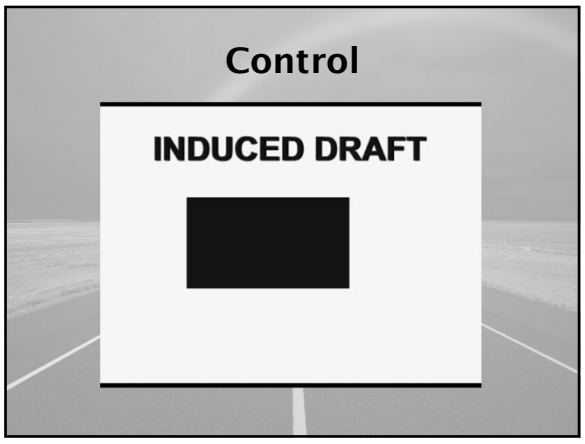
Control
INDUCED DRAFT

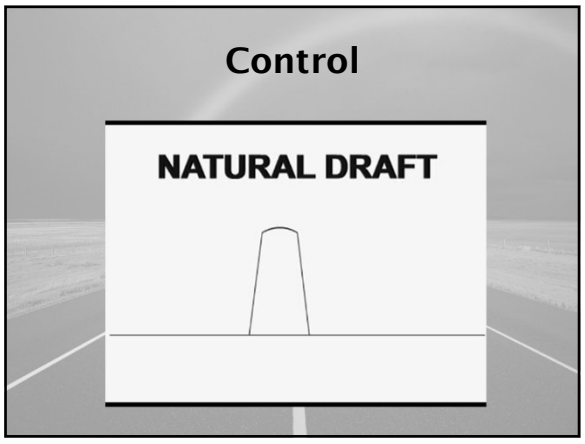
Control
NATURAL DRAFT

Leak in a Rotary Dryer

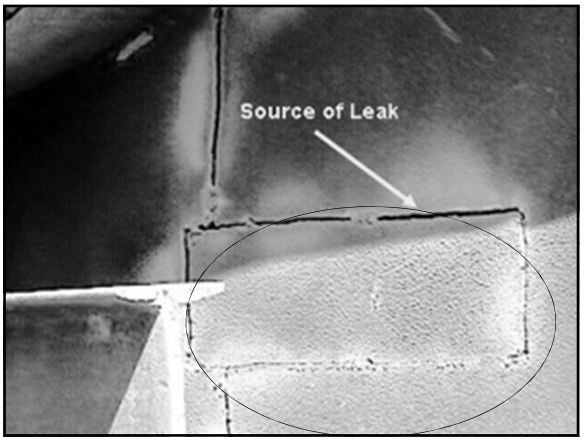

Control Drum/Dryer Emission

- Drum/Dryer produce large amounts of PM
- Two control devices
  - ✓Primary for large particles and
  - ✓Secondary for small particles
- Combined efficiency is 99% or greater
- Ask for manufacturer or facility guarantee


Primary Controls
Cyclone

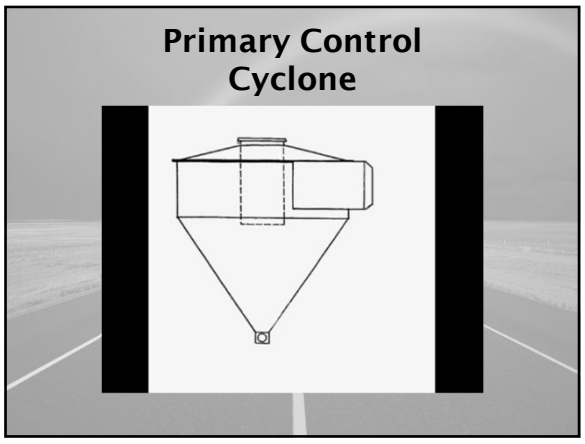
Primary Control
Cyclone

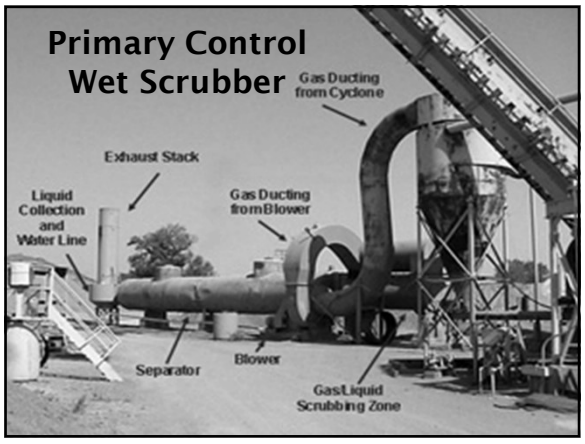
Primary Control
Wet Scrubber
Gas Ducting from Cyclone
Exhaust Stack
Liquid Collection and Water Line
Gas Ducting from Blower
Separator
Blower
Gas/Liquid Scrubbing Zone

Wet Scrubber?

Process/Control Wet Scrubber

- Used to control stack emissions
  - ✓Must meet the emission requirements specified in Subpart OOO
  - ✓Continuous emissions pressure monitor
    - ± 250 pascals ± 1inch water gauge pressure
  - ✓Continuous measurement of scrubbing liquid flow rate to scrubber

Control Techniques Wet Scrubber

- General description
  - ✓Particles get trapped in liquids
    - Inertial impaction and diffusion
  - ✓Liquids must contact particles and dirty liquids must be removed from exhaust gas

Particulate Scrubbers

- Initial quench – use clean water
- Water drops and particles must contact (impact)
  - ✓Requires water flow and mixing energy
- Dirty water collection
- Water treatment & recirculation

Wet Scrubber Operation

- Particles collected by impaction
- Gasses collected by diffusion & absorption

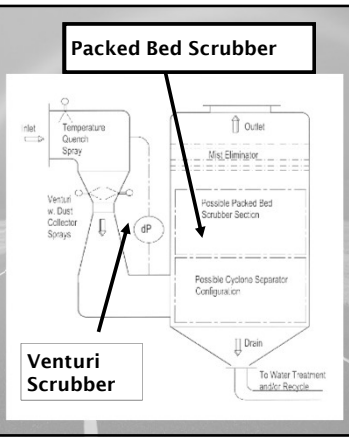

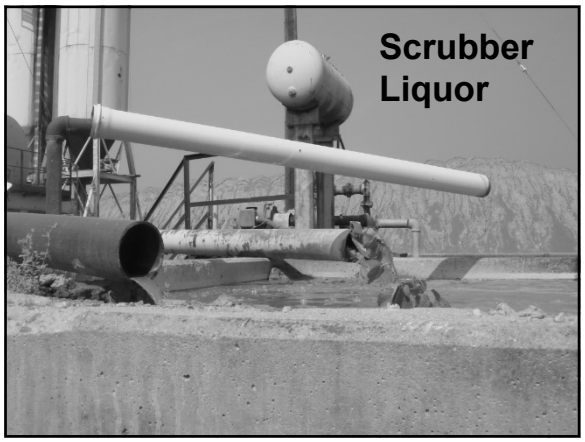

Primary Control Knock Out Box

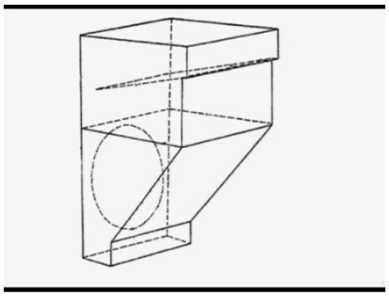

Primary Controls Knock-out Box

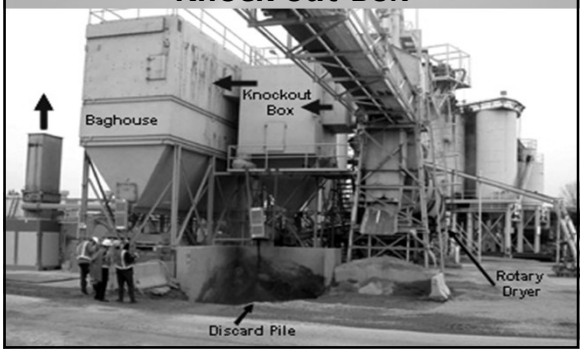

Secondary Control Baghouses

- General description
  - ✓ Particles trapped on filter media, then removed
  - ✓ Either interior or exterior filtration systems
  - ✓ Up to 99.9% efficiency
  - ✓ Fabric filters are big vacuum cleaners with a cleaning mechanism

Secondary Control Baghouse

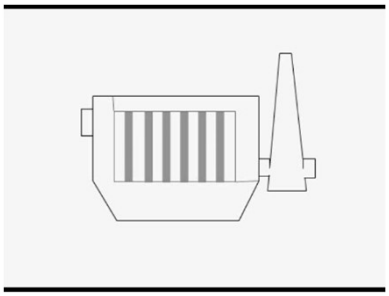

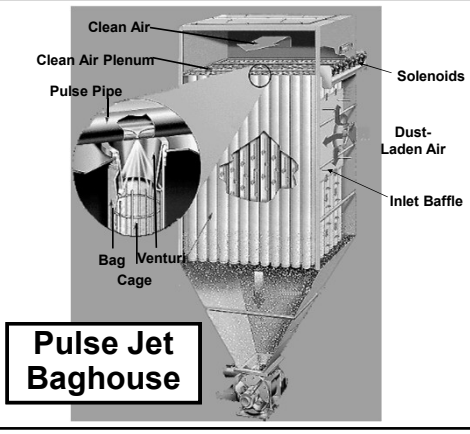

Pulse Jet Baghouse


Secondary Control
Pulse Jet Baghouse

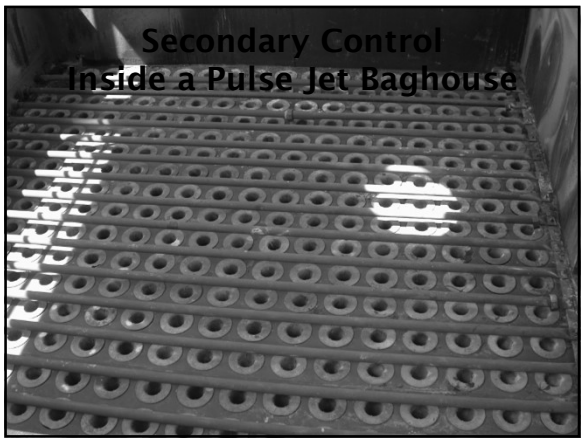
Secondary Control
Inside a Pulse Jet Baghouse


Pulse Jet
Bag

Measuring Pressure Drop

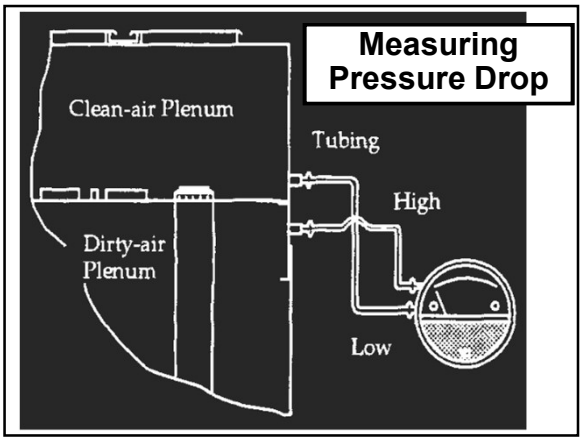

Baghouse Design Considerations

- Pressure Drop
- Air-To-Cloth Ratio
- Collection Efficiency
- Fabric Type
- Cleaning
- Temperature Control
- Bag Spacing
- Compartment Design
- Space and Cost

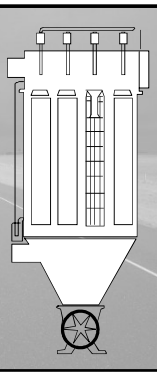

Secondary Control Shaker Method

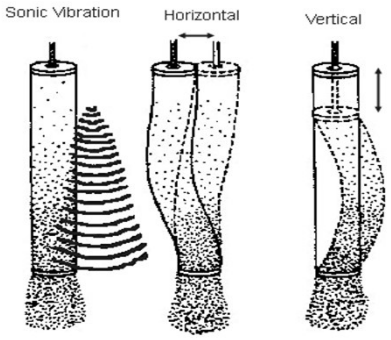

Secondary Control PM Control Techniques – Fabric Filter

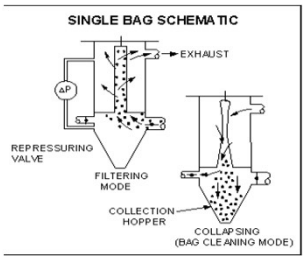

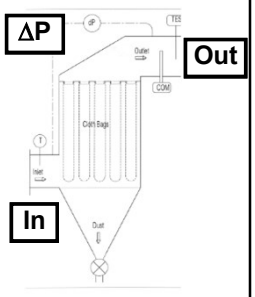

Secondary Control PM Control Techniques – Fabric Filter

- Factors affecting efficiency
  - ✓Filter media
    - Abrasion
    - High temperature
    - Chemical attack
  - ✓Gas flow
  - ✓Broken or worn bags

Secondary Control PM Control Techniques – Fabric Filter

- Factors affecting efficiency (continued)
  - ✓Cleaning system failure
  - ✓Leaks
  - ✓Re-entrainment
  - ✓Damper or discharge equipment malfunction
  - ✓Corrosion

Secondary Control PM Control Techniques – Fabric Filter

- Performance indicators
  - ✓Outlet PM concentration
  - ✓Bag leak detectors
  - ✓Outlet opacity
  - ✓Pressure differential
  - ✓Inlet temperature
  - ✓Temperature differential

Secondary Control PM Control Techniques – Fabric Filter

- Performance indicators (continued)
  - ✓Exhaust gas flow rate
  - ✓Cleaning mechanism operation
  - ✓Fan current
  - ✓Inspections and maintenance

Secondary Control Bag House Monitoring

- Normal bag house emissions are very low.
  - ✓Opacity sensors (COM) aren't very good below 1-2%, so they don't detect initial problems.
  - ✓Opacity will show a major particulate emissions increase.
  - ✓COM or Method 9 may be OK for loose emission limits.

Inspection Procedures Instrumentation

- What types of instruments are being used to monitor for permit conditions?
  - ✓Magnehelic Gauge
  - ✓Triboelectric Monitor

Inspection Procedures Magnehelic Gauge

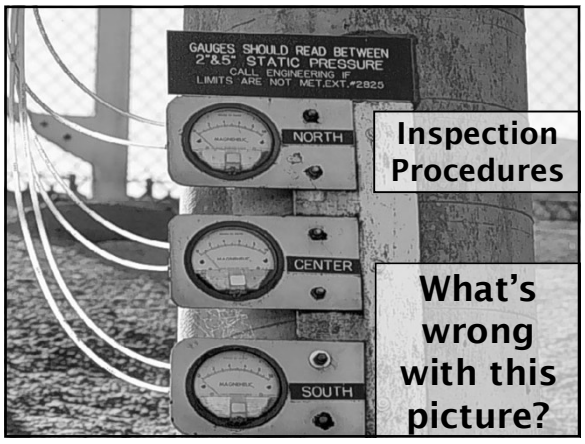

Baghouse Monitoring Triboelectric Sensor

- TESs are a newer technology
  - ✓Primary use cement, coal fired power plants, and food manufacturing
  - ✓US EPA encouraging use of TESs as CAM (compliance assistance monitoring, 40 CFR 64) or
  - ✓As a performance indicator in lieu of a source test
- Districts are adopting as BACT or compliance measurement tool

Baghouse Monitoring Triboelectric Sensor

- Tribo electric sensors (TES) work well at very low particle concentrations (very sensitive).
- TES detects micro amp current from particles hitting a metal probe.
- TES is simple and inexpensive.
- TES is an effective monitor when a small to moderate increase in emissions is of concern.

Baghouse Monitoring Triboelectric Sensor

- Operates on the principle of electric conductivity
  - ✓Triboelectric Principle: When 2 solids contact an electrical charge is transferred between the 2
  - ✓Current generated is proportional to the particulate mass flow rate
  - ✓Instrument tuned to produce continuous analog output and/or an alarm at a specific signal level

Control Devices
PM CEMS/TES Devices

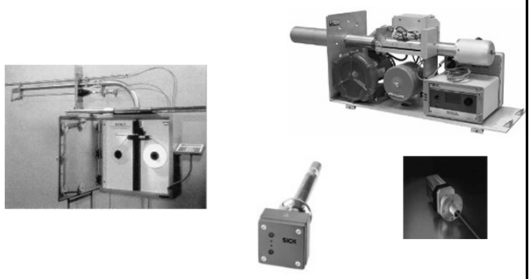

Control Device
Triboelectric Sensor
Schematic

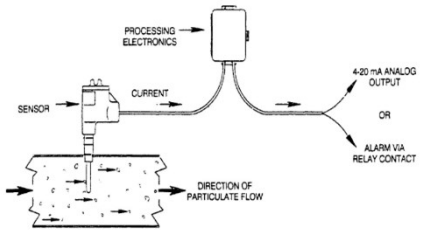

Triboelectric Sensor
Installation for a Negative
Pressure Monitoring System

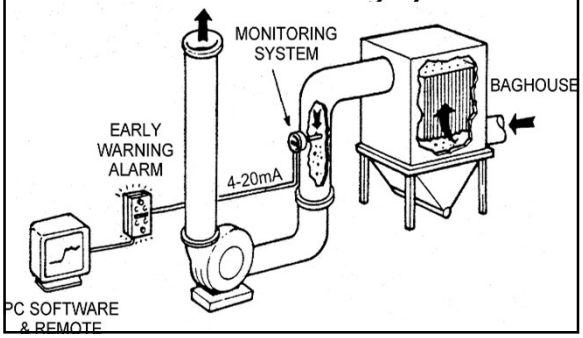

Monitoring Device Triboelectric Sensor

- TES work well at low particulate concentrations
- Detects micro amp current from particles hitting a metal probe
- Simple and inexpensive
- Effective monitor when a small to moderate increase in emissions is of concern

Baghouse Monitoring Device Triboelectric Sensor

- Establish baseline
- Monitor detects gradual or instantaneous increases in the signal from baseline
- Baseline emissions can be as low as 0.1 mg/dscm (0.00005 gr/dscf)

Inspection Procedures Fans/Blowers

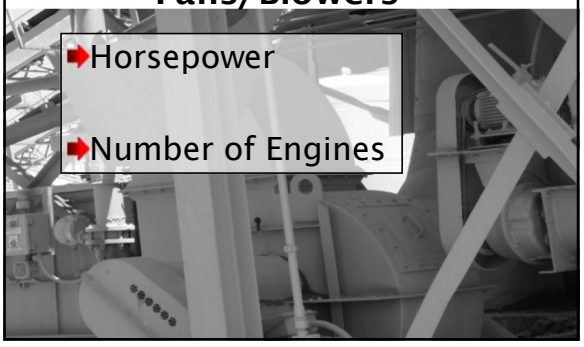

- Horsepower
- Number of Engines

Control Scavenger System

- Collects fugitive emissions from:
  - ✓Hot aggregate elevator
  - ✓Vibrating screens
  - ✓Hot bins

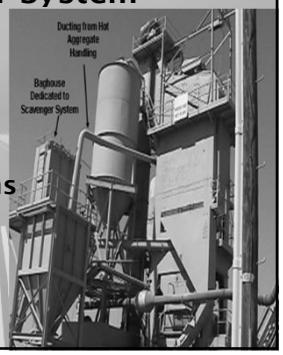

Control Asphalt Binder Storage

- May or may not be controlled
- Controls include
  - ✓Condensers,
  - ✓Vapor recovery system (similar to gas station)
    - Vapors returned to refinery for incineration
- Delivery truck lines are flushed with non-hazardous cleaners

Control Asphalt Binder Storage

Control Blue Smoke

Control Blue Smoke

- An aerosol of condensed organic particles adsorbed to dust or water particles

Control
Blue Smoke

- Some organic compounds begin to
1. vaporize at 300 F
2. Condense in ambient air
3. Adsorb to dust and water particles
- To form visible emissions
- Visible emissions are formed until the air becomes saturated

Control
Blue Smoke Emissions Points

- Drop points of HMA from pugmill
- On top of surge bins/silos
- At the base of surge bins/silos
- Drag slat conveyors
- Truck loadout

- Challenge to capture and control
- Primary reason for complaints
- Perception !!


Blue Smoke Collection System
Blue Smoke Collection System to Dryer
Induction Fan of Blue Smoke Collection System


Blue Smoke Control Device??
10/22/2018
149


Blue Smoke Controls


Truck Loadout & Blue Smoke Controls


Silo/Truck Loadout & Blue Smoke Controls??


Blue Smoke Controls
10/22/2018
153


Blue Smoke Control Device
10/22/2018
154

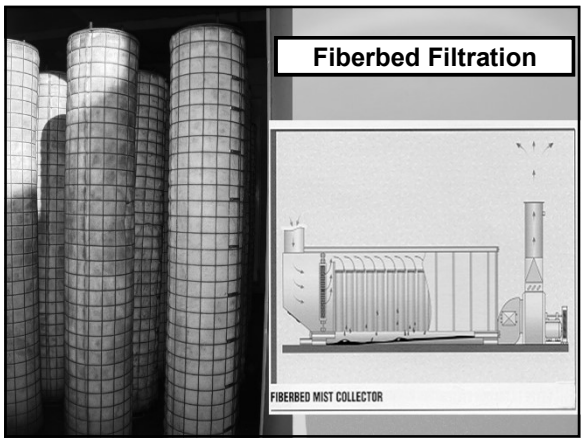
Fiberbed Filtration
FIBERBED MIST COLLECTOR

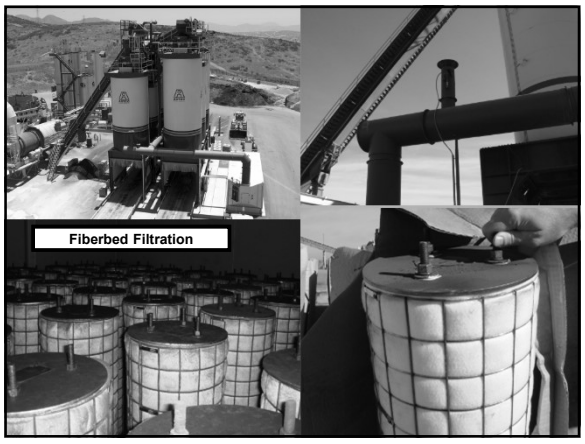
Fiberbed Filtration

Control of Blue Smoke
Truck Entrance

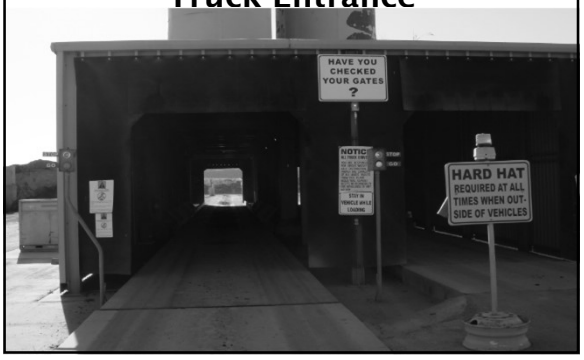

Control Blue Smoke
Enclosed Load Out

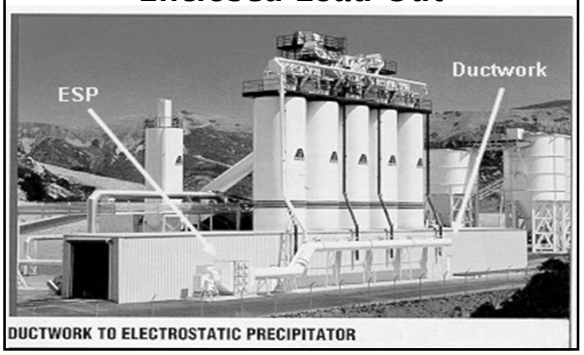

Control
Side View of HMA Drop with ESP/Smog Hog for Blue Smoke

Control
Ducting to ESP/Smog Hog

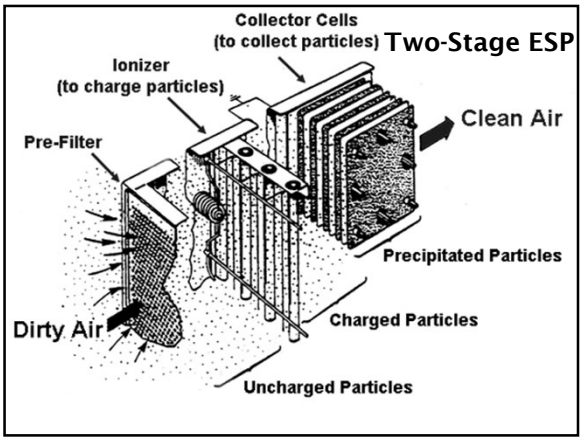

Controls
Innovations in HMA Production

- Four areas where the technology has improved
  - ✓burner design,
  - ✓fuels,
  - ✓dryer/drum design, and
  - ✓blue smoke controls

Controls
Triple-Drum Mixer

ASPHALT SEAL COAT AND PAVING
Reading a Moving Plume

Moving Source

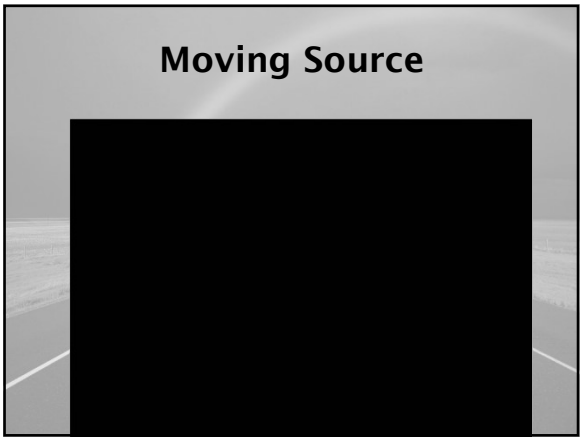

Permit Conditions

- Emission Controls
  - ✓Emission Limits
  - ✓Process Limits
  - ✓Emission Rate Limits
  - ✓Requirements to Minimize Emissions
  - ✓Source Test
  - ✓CAM (gauges on baghouse)

Permit Conditions cont.

- Fuel Requirements
  - ✓Type
  - ✓Nitrogen or Sulfur content
  - ✓Amount of fuel
  - ✓Type of backup fuel
  - ✓Method of measurement
  - ✓Recordkeeping of fuels purchased and used

Permit Conditions cont.

- Visible Emissions Limits
  - ✓NSR lists are 20% or No. 1 on Ringleman
  - ✓Sources permitted before NSR maybe 40% or No. 2 on Ringleman

Process/Control
Dry Collection Systems

- Baghouses are regulated in terms of
  - ✓ Source Test Requirements and Methods
  - ✓ Visual Test Method?

Permitting/Inspection
HMA Source Test

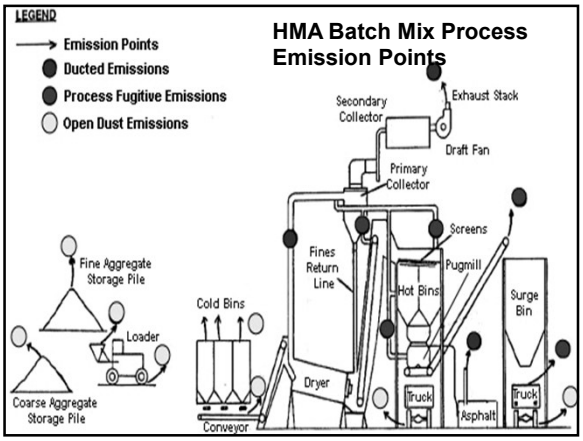

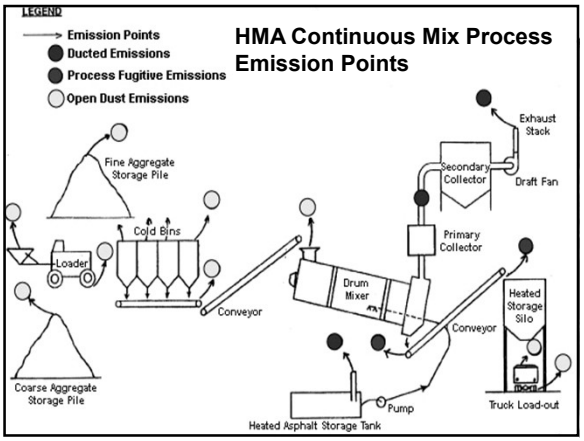
LEGEND
Emission Points
Ducted Emissions
Process Fugitive Emissions
Open Dust Emissions
HMA Continuous Mix Process
Emission Points
Exhaust Stack
Secondary Collector
Draft Fan
Fine Aggregate Storage Pile
Cold Bins
Primary Collector
Loader
Drum Mixer
Heated Storage Silo
Conveyor
Conveyor
Coarse Aggregate Storage Pile
Pump
Truck Load-out
Heated Asphalt Storage Tank

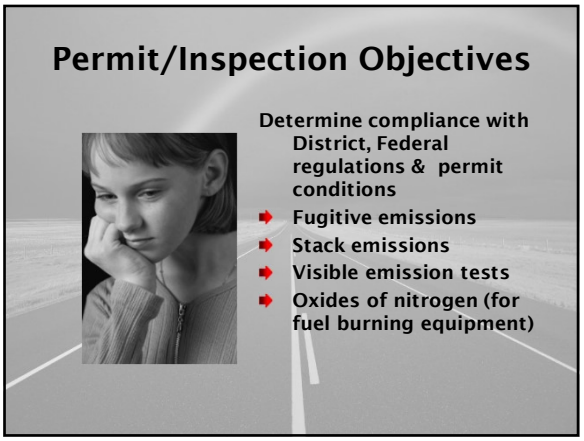
Permit/Inspection Objectives
Determine compliance with District, Federal regulations & permit conditions
Fugitive emissions
Stack emissions
Visible emission tests
Oxides of nitrogen (for fuel burning equipment)